
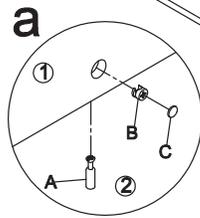


# Pivot Reception Desk

## Assembly Instructions






A	TUN010CL	B	TUN010KL	C	TUN026	E	TUN021AG	F	TUN013LB	G	TUN018SC	H	TUN015BG	I			
	Cam lock 22Pcs+1Pcs(spare)		Klix Cam 22Pcs+1Pcs(spare)		Cam Cover 22Pcs+1Pcs(spare)		Dowel 8Pcs+1Pcs(spare)		Adjustable Glide 4 Pcs		6Hole L-Bracket 8Pcs		Screw #4*5/8" 36Pcs+1Pcs(spare)		60mm Black Grommet 2 Pcs		Cover 4Pcs+1Pcs(Spare)

### STEP1



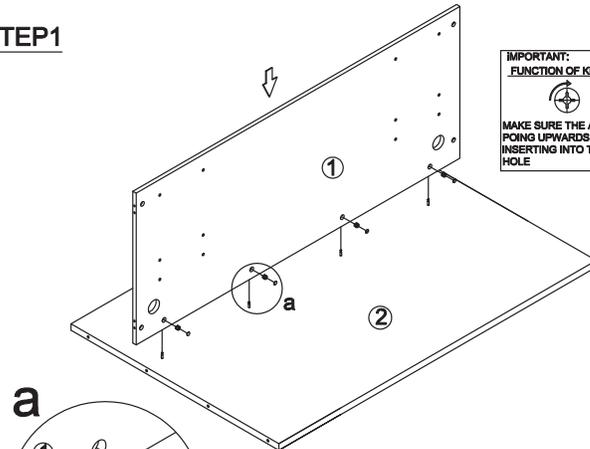


### STEP2

**IMPORTANT:**  
FUNCTION OF KLIX CAM  
1/4 RIGHT  
TURN FOR  
LOCKING  
MAKE SURE THE ARROW IS  
POINTING UPWARDS BEFORE  
INSERTING INTO THE PANEL'S  
HOLE

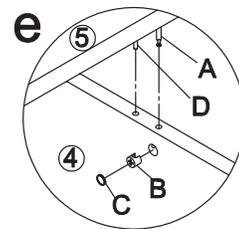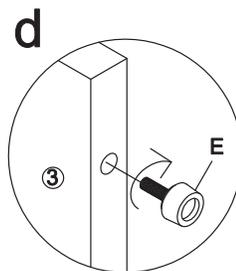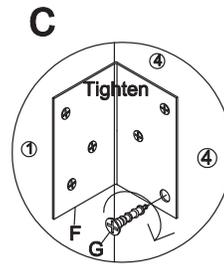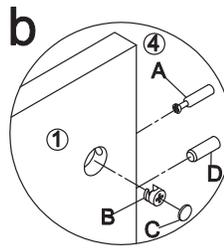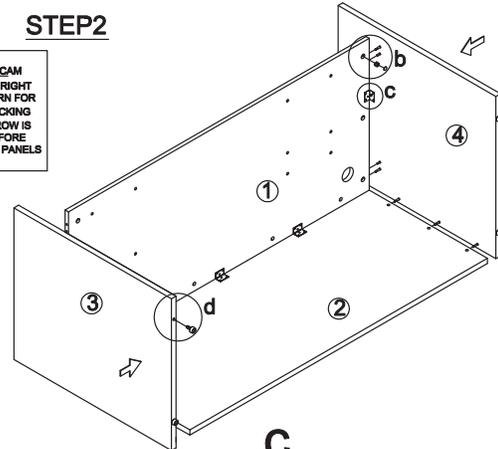

### STEP3

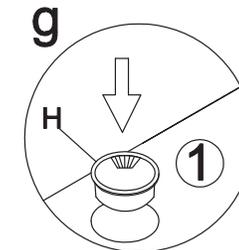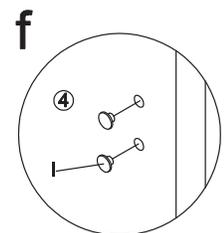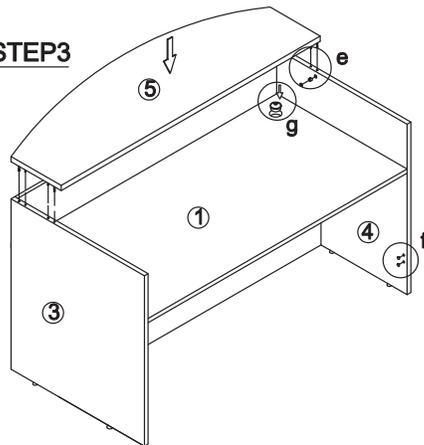

**COMPLETED ASSEMBLY**

### NOTES

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples and packing straps before you start to assemble.
- Keep all hardware parts out of reach of children.